



TO BE USED ONLY WITH PLANUS CONTROLLER “CTRL-1P” (single button version) or “CTRL-2P” (double button version).

Respect the matching of the versions for Touch Wall Switch and Controller.

INFO	
Standard color of the glass:	WHITE and BLACK (both “single” and “double” button versions)
Alternative versions:	Glass in any RAL color .
CABLE LENGHT (Wall Switch):	2 mt (6 x 0.25)
CONNECTOR:	TYCO 280365
CABLE LENGHT (Controller):	1,5 mt (6 x 2,5)
DEGREE OF PROTECTION:	IP55
NORMS:	EN 10133—EN 55032—EN 55024
PATENT:	RM2013U00072



SINGLE BUTTON VERSION

This control panel causes the toilet to flush automatically, leaving a certain amount of water in the bowl.



DOUBLE BUTTON VERSION


The toilet activated by two button control panel leaves the bowl completely empty when not in use. The "Before Use" button must be pressed to fill the bowl ready for use.

INTEGRATED TANK LEVEL INDICATORS

Touch Wall Switch has 2 Level indicators, to check the status of the black water tank. To operate, 2 dedicated sensors must be connected to Controller

4/4 TANK
ALARM - FULL
(red)

3/4 TANK
ALARM
(amber)

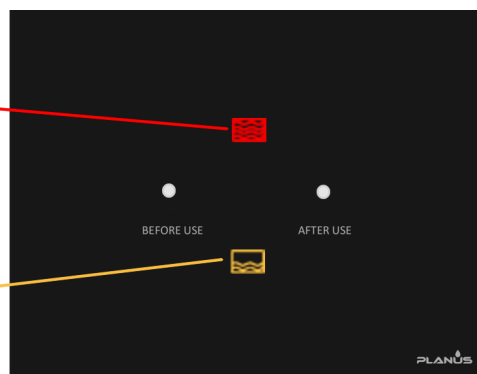


INSTALLATION

CONTROLLER:


- Fix with the supplied screws in a hidden place (**possibly, guarantee the ease of access for maintenance**)
- Connect the plugs (see diagram)

WALL SWITCH:

- Fix the frame (supplied) to the wall by turning the side tabs (replace the screws if insufficient to match the wall thickness).
- Pass the wire through the frame (see image below)
- Fix the Touch wall switch to its frame just pushing (Dual-Lock system)
- Route the wire to the Controller and plug to dedicated socket

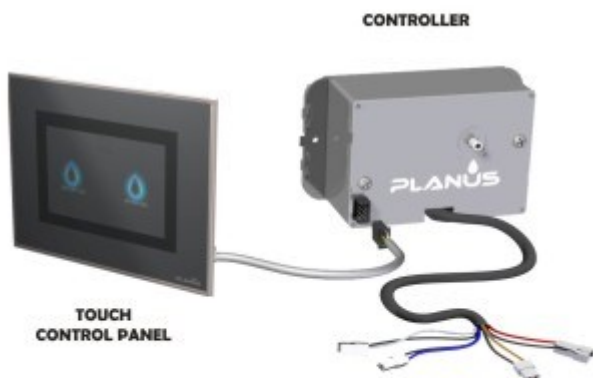

CONNECTIONS (SIMPLIFIED)

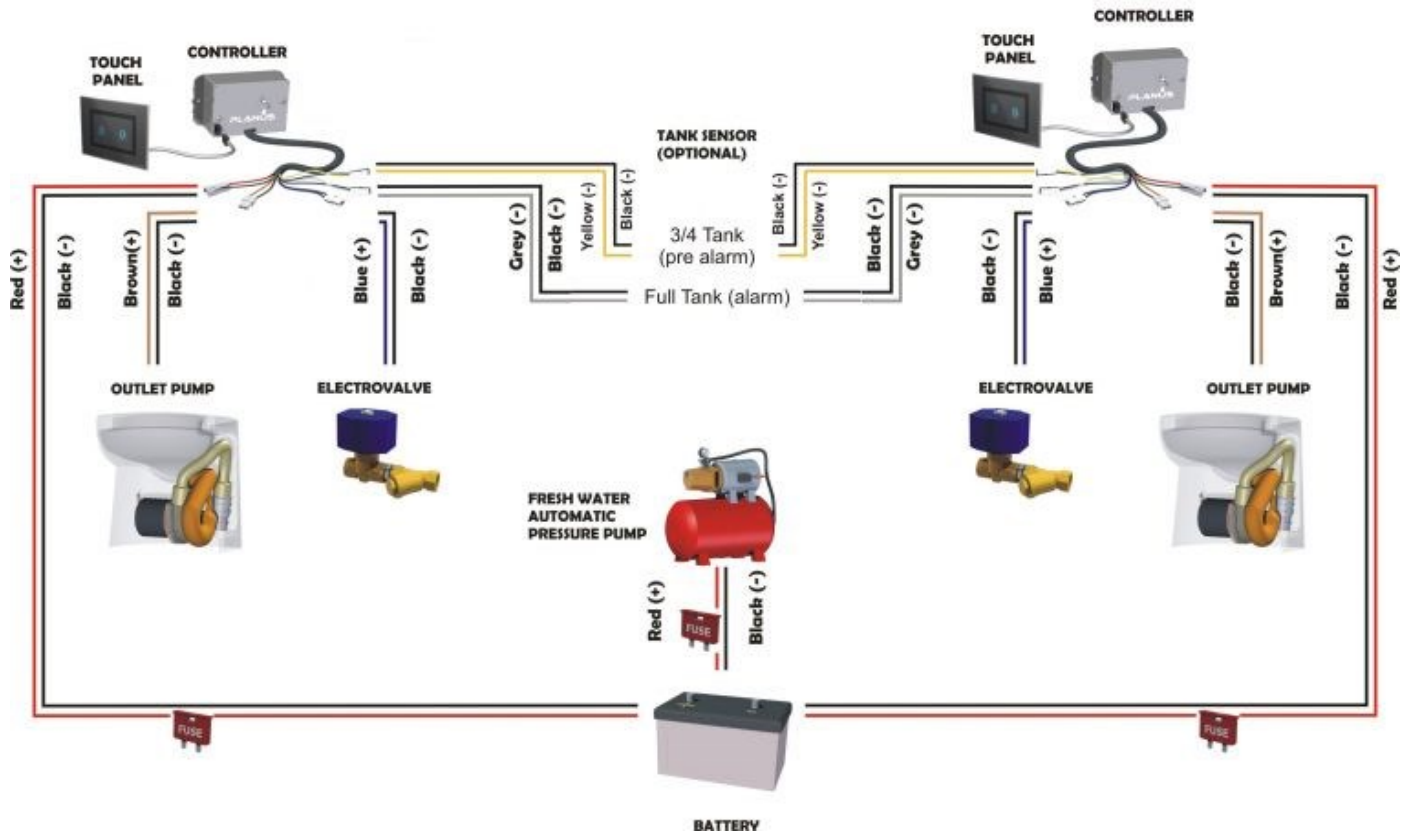


SET THE WATER LEVEL

RECOMMENDED WATER AMOUNT (LEVEL) IS ABT. 1CM ABOVE THE TOILET'S DRAINAGE HOLE AT THE END OF "BEFORE USE" FUNCTION (DOUBLE BUTTON VERSION) OR WHILE UNATTENDED (SINGLE BUTTON / FAMILY VERSION).

TUNE THE KNOB AT THE BACK OF THE PANEL TO REDUCE OR EXTEND THE TIMING FOR WATER INLET




12/24Vdc DIAGRAM

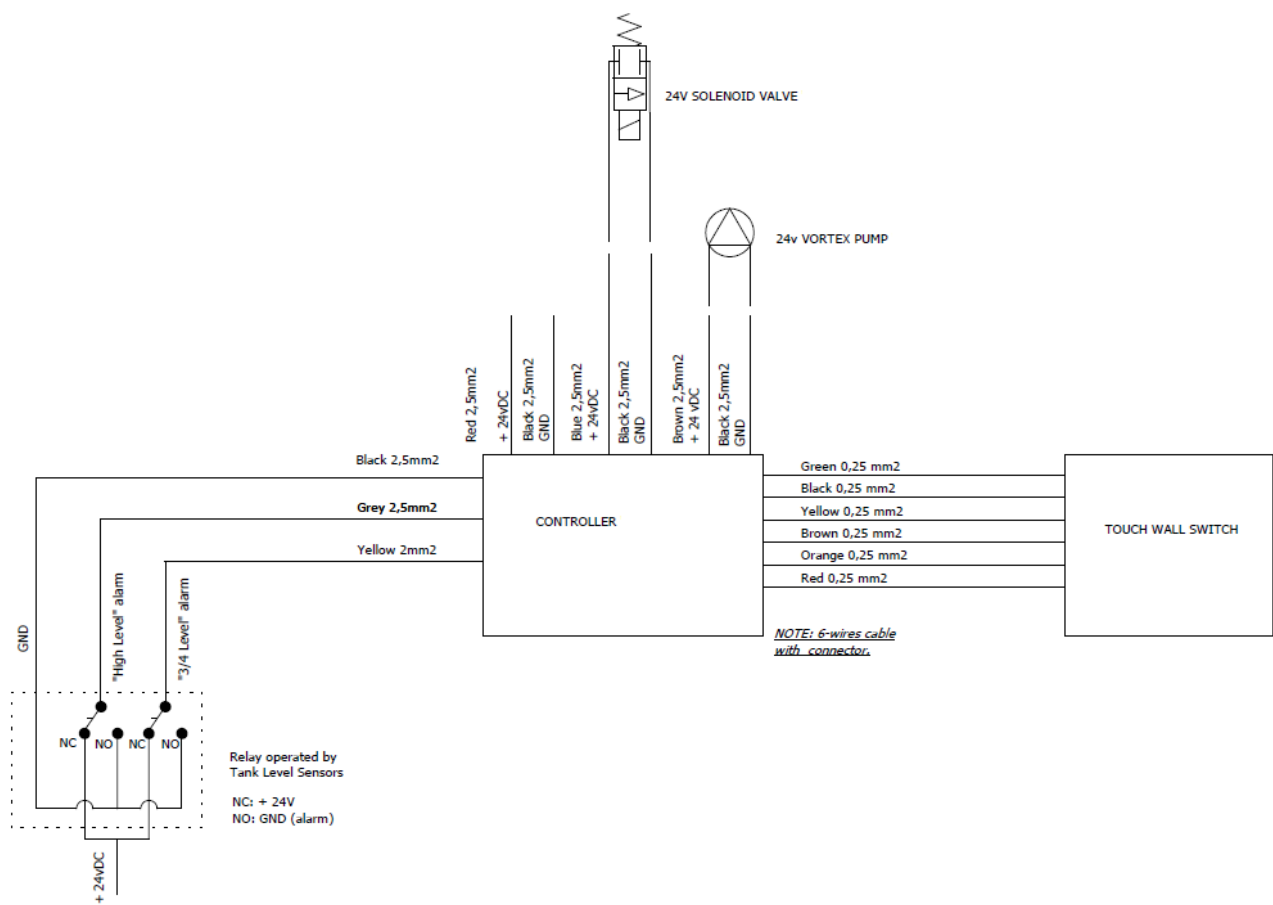

230Vac DIAGRAM

NOTE: for 230Vac systems an additional TRANSFORM BOX item (PW.030.00) is supplied with toilets.

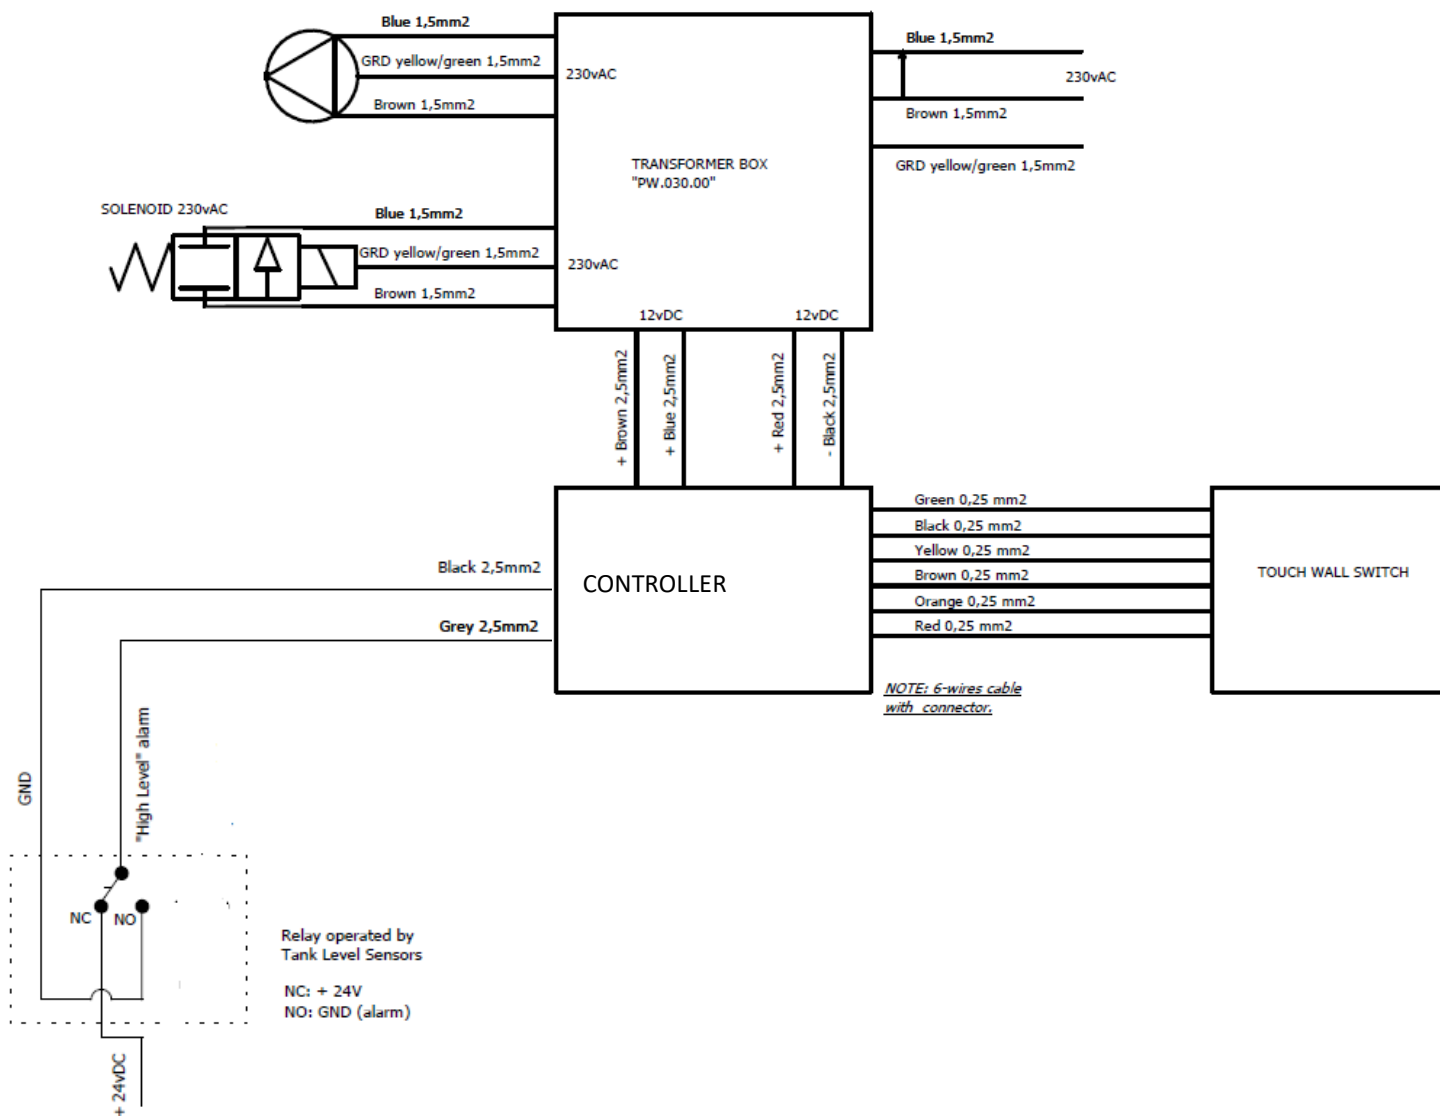

TOUCH Panel: additional info

Follow-Me

USE INDICATION

Moving your hand toward the wall switch, you will activate the usage indication: TOUCH will suggest you which button you should use blinking the relative icon.

This important innovative solution combine absolutely for the first time the advantage to have a two switches operating toilet and a very simple use for the guest, together with a very clean and elegant design.



CLEANING MODE (TEMPORARY LOCK-OUT)

In order to avoid the accidental activation of the toilet while cleaning the glass, it's possible to temporarily deactivate the TOUCH panel.

- Touch and keep one of the buttons for 5 sec.
- All the backlight will be turned off for 30 sec.

After 30 sec. TOUCH will turn on the lights and will be operative.



The TOUCH panel includes a night courtesy light.

Thanks to this feature, you can have a gentle blue illumination in the bathroom sufficient to avoid to turn on the main light, that could be perceived as an interruption of the natural sleeping phase.

This function could be disabled, enabled permanently or in dynamic way.



Settings of the courtesy light

① PERMANENT ACTIVATION OF THE NIGHT COURTESY LIGHT

In addition to the icons, the border of the panel could be gently illuminated permanently as night courtesy light.

To switch ON or OFF the night courtesy light, touch and keep one of the buttons:

- After 5 sec. the panel is switched off. Keep touching.
- After additional 5 sec. the border backlight will flash and the new setting is recorded.

NOTE:

if the Touch panel is not used for 10 hours, the border backlight will be turned off until next use (only if it has been set ON)



② DYNAMIC ACTIVATION OF THE NIGHT COURTESY LIGHT

It's possible to turn on the night courtesy light temporarily only when needed. When this function is active, the border backlight will remain normally off. Moving your hand over the screen, the night courtesy light will be activated for 2 minutes.


To switch ON or OFF this function, touch and keep one of the buttons:

- After 5 sec. all the backlight will be turned off. Keep touching.
- After additional 5 sec. the border backlight will flash. Keep touching.
- After additional 20 sec. the border backlight will flash and the new setting is recorded.

NOTE:


Switching OFF this function following the above steps here in point ② you will have the night courtesy light permanently OFF.

Switching OFF this function following the steps indicated in point ① you will have night courtesy light permanently ON.

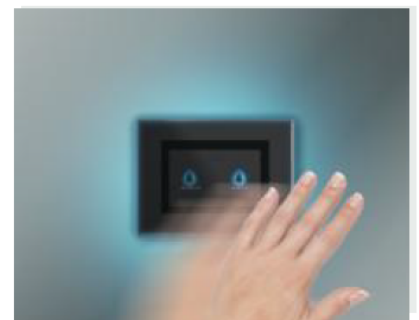


DIMENSIONS

TOUCH Wall Switch

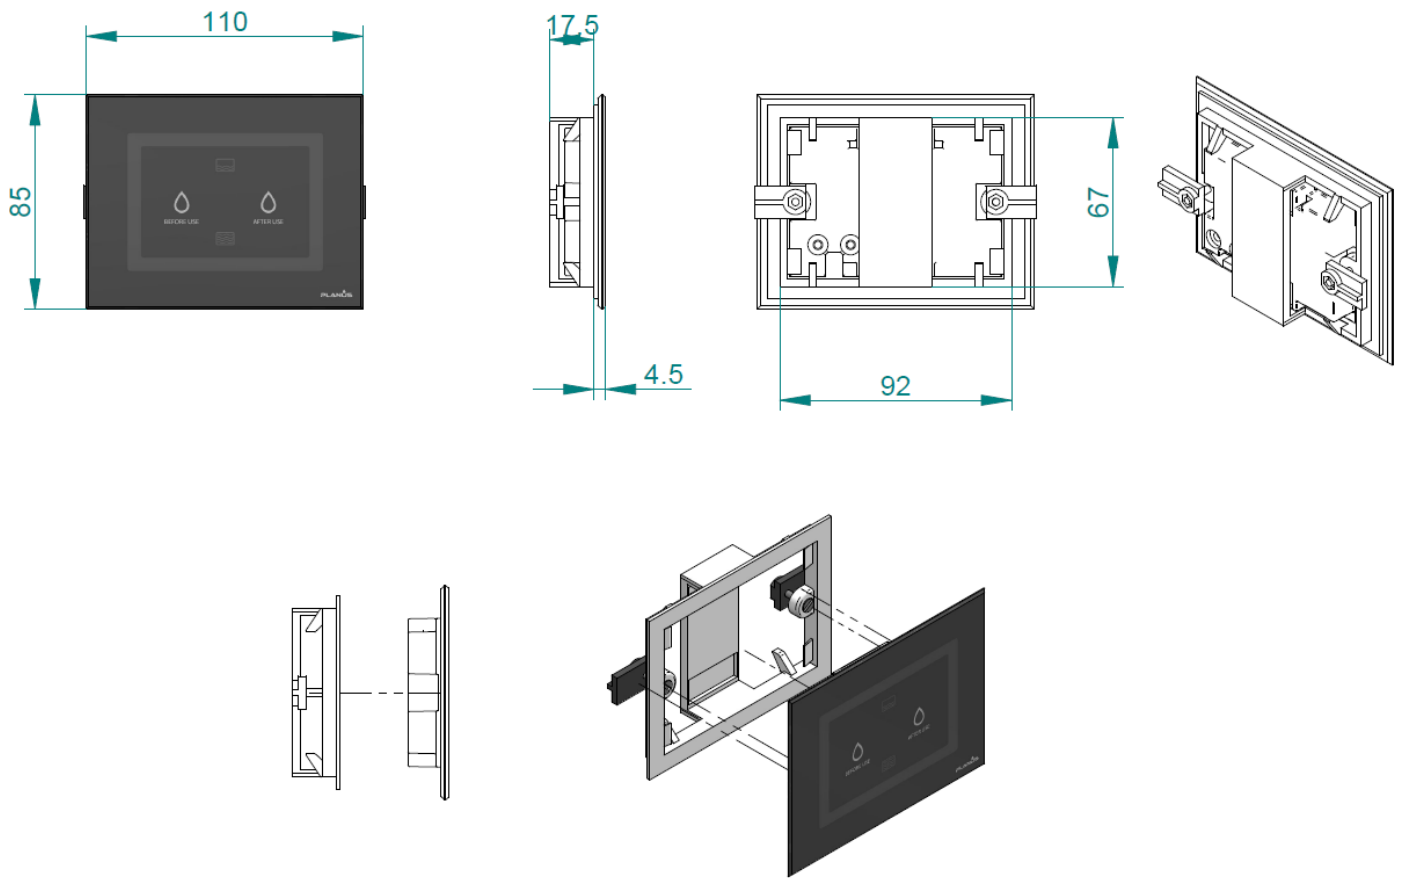

Controller

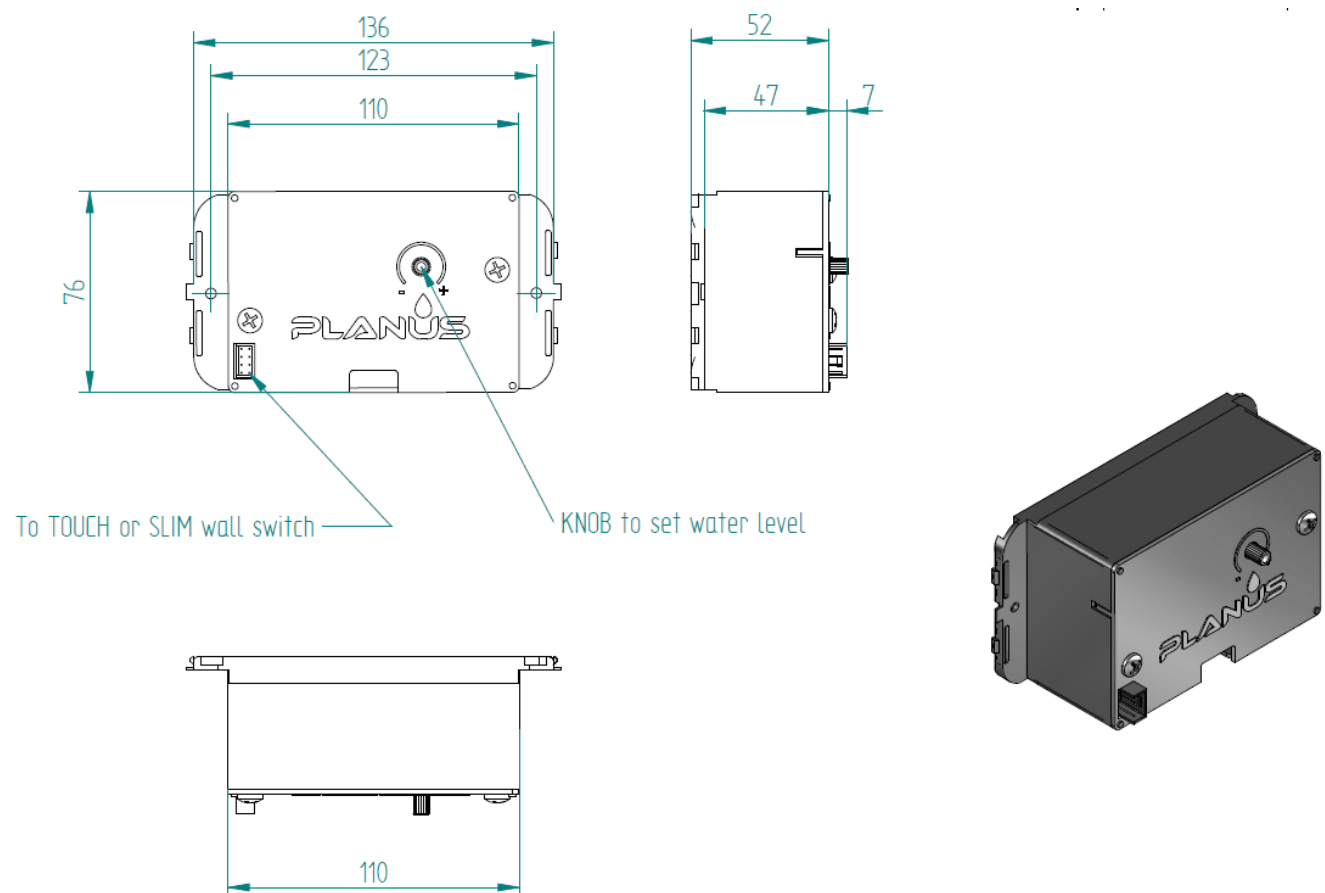

www.planus.eu

